

**iQ parts**  
IQ-PARTS-SHOP.COM



**SPECS &  
INFORMATION**




**This is how you install this hose clamp.**

Ø OD Hose	mm	8	10	12	15	20	25	30	40
Bandlength	mm	105	118	130	170	200	235	270	330
Length Bending	mm	20	20	20	20	20	25	25	30

Ø OD Hose	mm	50	60	70	80	90	100	110	120
Bandlength	mm	400	470	540	600	670	730	800	870
Length Bending	mm	35	40	45	45	50	50	55	55

1. Measure the  $\varnothing$  OD of de hose
2. Read the correct length of de Band from the table and cut it.
3. Bend metal strip (For length: see table)

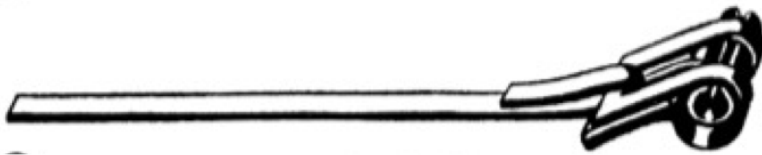

4. Put the bent part in the cotter pin.



5.



6.



7.

5. Wrap the hose twice with the clamp band and insert the end of the band into the cotter pin.
6. Turn the cotter pin to the right with an iron pin.
7. This secures the hose clamp around the hose.





info@iq-parts.nl  
Harsweg 34A  
2461 EZ Ter Aar  
T +31 252 624 126  
The Netherlands