

iQ parts
IQ-PARTS-SHOP.COM




**SPECS &
INFORMATION**

DIN 6799 Assembly tools

Information

Instructions:

- 1.- Remove the plastic cap from the cartridge
- 2.- Insert the narrow end of the cartridge into the slit in the application device, making sure that the spike goes down until it can go no further. Turn the knob on the front of the device clockwise until the cartridge is held firm in a vertical position
- 3.- Insert the fork (with the stamped number facing upwards) into the corresponding slot and push it in as far as it will go.
- 4.- Remove the fork. A DIN 6799 circlip is now held between the two prongs of the fork and is now ready to be slotted into the groove on the shaft.

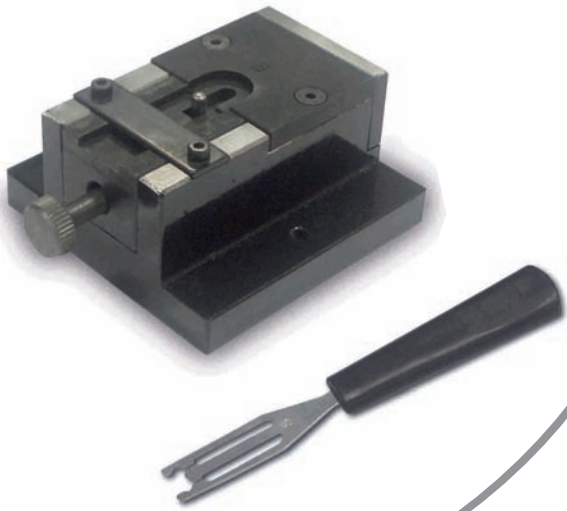



DIN 6799 Assembly tools

Part n° Application device	Nominal diameter	Packing Quantity	Outer box quantity
03050267	1,5	1	1
03050274	1,9	1	1
03050288	2,3	1	1
03050299	3,2	1	1
03050300	4	1	1
03050317	5	1	1
03050322	6	1	1



DIN 6799 Assembly tools

Part n° Fork	Nominal diameter	Packing Quantity	Outer box quantity
03071022	1,5	1	1
03071033	1,9	1	1
03071044	2,3	1	1
03071054	3,2	1	1
03071066	4	1	1
03071072	5	1	1
03071088	6	1	1

* For dimensions between M6 and M12, please consult for details on availability.

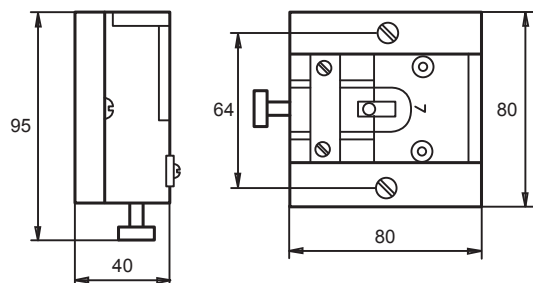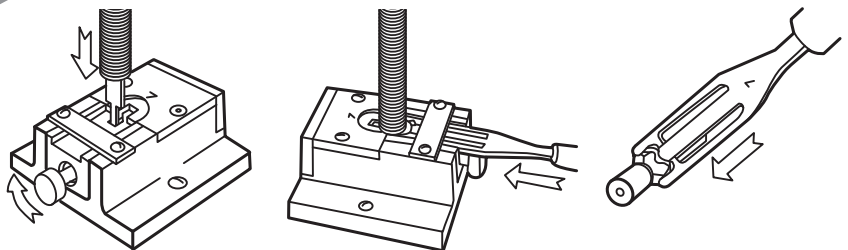

APARATO Y HORQUILLAS ARANDELA DIN 6799

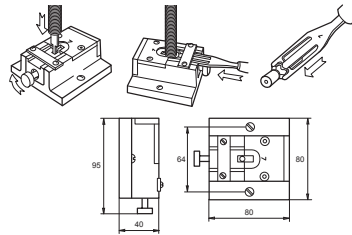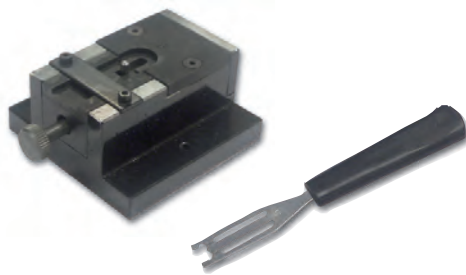

APARATO Y HORQUILLA

Diametro nom.	Referencia APARATOS	Envase	Embalaje
1,5	0305026-7	1	1
1,9	0305027-4	1	1
2,3	0305028-8	1	1
3,2	0305029-9	1	1
4	0305030-0	1	1
5	0305031-7	1	1
6	0305032-2	1	1

Diametro nom.	Referencia HORQUILLAS	Envase	Embalaje
1,5	0307102-2	1	1
1,9	0307103-3	1	1
2,3	0307104-4	1	1
3,2	0307105-4	1	1
4	0307106-6	1	1
5	0307107-2	1	1
6	0307108-8	1	1

Para medidas superiores a $\varnothing 6$ y hasta un máximo de $\varnothing 12$ consultar.



info@iq-parts.nl
Harsweg 34A
2461 EZ Ter Aar
T +31 252 624 126
The Netherlands