

iQparts
IQ-PARTS-SHOP.COM



**SPECS &
INFORMATION**

SM-FT-1001 Banding Tool

Operation, Parts & Safety Manual
Original Instructions





Index

Tooling

Depending on set up, this tool is designed to assemble the following HCL Smart® products:

- Smart® Band 19mm ($\frac{3}{4}$ ") Hybrid & Compact
- Smart® Band 32mm ($1\frac{1}{4}$ ") Hybrid & Compact

Follow the instructions described to achieve safe operation.

Note: This tool is not suitable for Smart® Band Standard Systems

Health & Safety

- 1.1** Warning & Safety Instructions

Torque Wrenches

- 2.1** Options

Operation

- 3.1** Using the Tool
- 3.2** Smart® Band Hybrid & Compact

Servicing

- 4.1** Servicing
- 4.2** Troubleshooting
- 4.3** Parts List



Health & Safety – Warning & Safety Instructions

Read these instructions carefully:

Whilst Smart® Band is considered to be significantly safer than alternative metallic solutions, failure to follow these instructions can still result in personal injury.



General safety considerations:

1. STRAP BREAKAGE HAZARD

Smart® Band is free from sharp metallic edges however it is important to understand that improper operation of the tool or sharp corners on the load can result in strap breakage during tensioning that could result in the following:

- A sudden loss of balance causing you to fall
- Both tool and strap flying violently towards your face

Failure to place the strap properly around the load, an unstable or shifted load, could result in a sudden loss of strap tension during tensioning. This could result in a sudden loss of balance causing you to fall.

Positioning yourself in-line with the strap during tensioning, can result in personal injury from flying strap or tool. When tensioning, position yourself to one side of the strap and keep all bystanders away.

2. TRAINING

This tool must not be used by persons not properly trained in its use. Be certain that you receive proper training from your employer. If you have any questions contact your HCL representative.

3. EYE INJURY HAZARD



Failure to wear safety glasses with side shields can result in eye injury or blindness. Always wear safety glasses with side shields which conform to ANSI Standard Z87.1 or EN 166.

4. CUT HAZARD



Although the Smart® Band is not metallic and therefore significantly less likely to cause cuts to hands or fingers, it is still strongly recommended that the operator wear protective gloves.

5. FALL HAZARD

Maintaining improper footing and/or balance when operating the tool can cause you to fall. Do not use the tool when you are in an awkward position.

6. TOOL CARE (for further information see Servicing section)

- Inspect and clean the tool daily. Replace all worn or broken parts.
- Lubricate all moving parts approximately every 50 hours of use.
- If used in sea water, wash off immediately with fresh water after use. Dry and lubricate.



Torque Wrenches – Options

Mountz – FGC-10A (Factory set to specified torque – Suitable for Marine use).

For use with:	Material
Smart® Band Hybrid 19mm ($\frac{3}{4}$ " Smart® Band Compact 19mm ($\frac{3}{4}$ "	PA66 (Nylon 6.6.)
	PA12 (Nylon 12)
	PPS
	POM (Acetal)



Mountz – FGC-30A (Factory set to specified torque – Suitable for Marine use).

For use with:	Material
Smart® Band Hybrid 32mm ($1\frac{1}{4}$ " Smart® Band Compact 32mm ($1\frac{1}{4}$ "	PA12 (Nylon 12)
	PPS



Norbar – TTi20 (Variable torque setting – Not advised for Marine use).

For use with:	Material
All product types	PA66 (Nylon 6.6.)
	PA12 (Nylon 12)
	PPS
	POM (Acetal)



Operation – Using the Tool with Mountz Torque Wrench

1

Insert band fully into fixed end of the buckle



2

Pull back band to engage latch teeth and push down firmly on the latch using the thumb or finger to ensure full engagement



WARNING – Ensure latch is fully engaged with band before tightening. Latch not fully engaged could lead to premature failure of system when tightening

3

Wrap band around the application...
...and insert band into other end of buckle



4

Pull band tight by hand, making sure teeth are fully engaged with band

5

Attach Torque wrench to the square drive at the rear of the tool.

Optional – Lock Torque wrench to square drive using a 4mm hexagon key




Operation – Using the Tool with Mountz Torque Wrench

IMPORTANT – If Mountz type torque wrench is being utilised follow steps 6-9 followed by 18-20

6


Is the orange marker at the Start / Finish position?

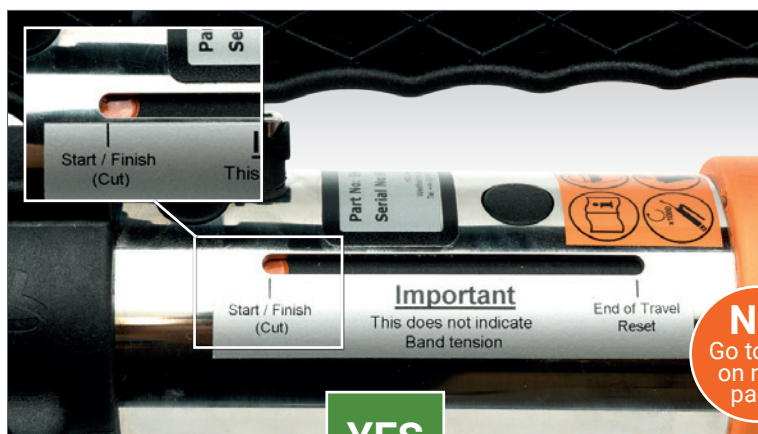

NO
Go to 6.1 on next page

7

Insert tool onto band...
...and push tool up against buckle

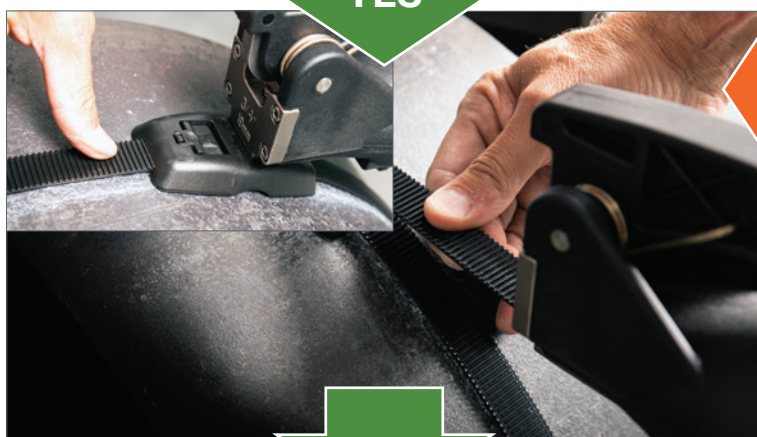

NOTE – The Mountz torque wrench is factory set to the correct torque requirement for the specified product being used. The set torque is marked on the wrench.

The torque wrench does not have a ratchet facility and will wind clockwise until the set torque is reached. At this point it will slip over with a positive click.


8

Tighten the band using a winding movement...
...until the Torque wrench 'CLICKS'



9

Is the orange marker at the 'End of Travel' position? (tool has run out of movement)

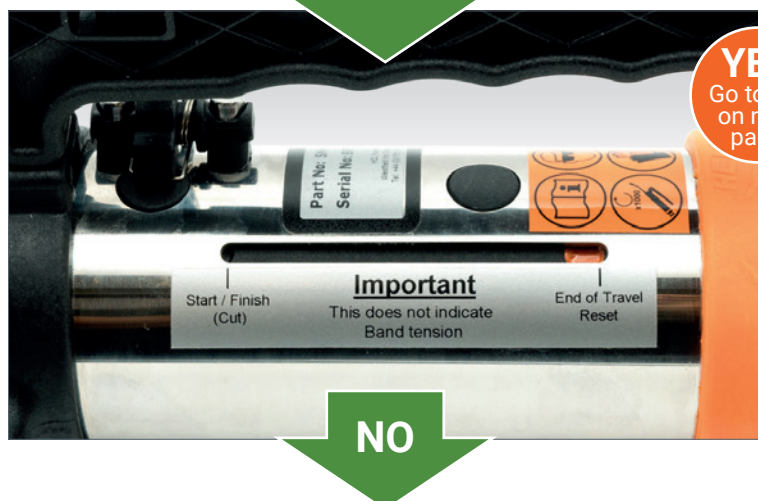

YES
Go to 8.1 on next page

NO

3.1

COMPANY WITH
QUALITY SYSTEM
CERTIFIED BY DNV
ISO 9001



6.1


...wind Torque wrench anti-clockwise...



Go to 7
on previous
page

6.2


...until the orange marker is at the
Start / Finish position

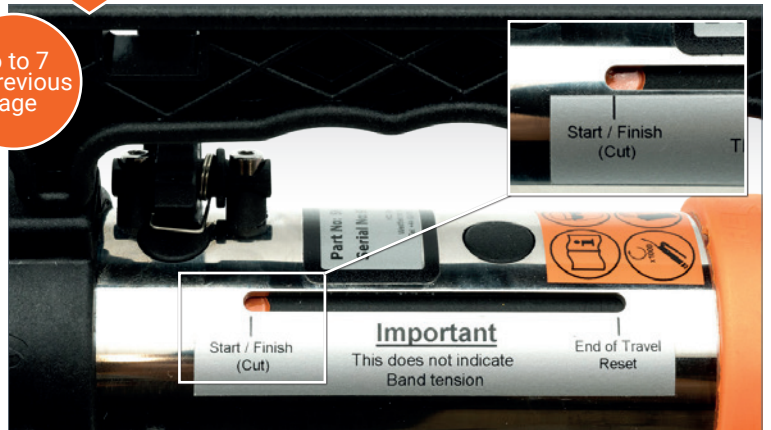

8.2

...until the orange marker is at the
Start / Finish position

Go to 8
on previous
page

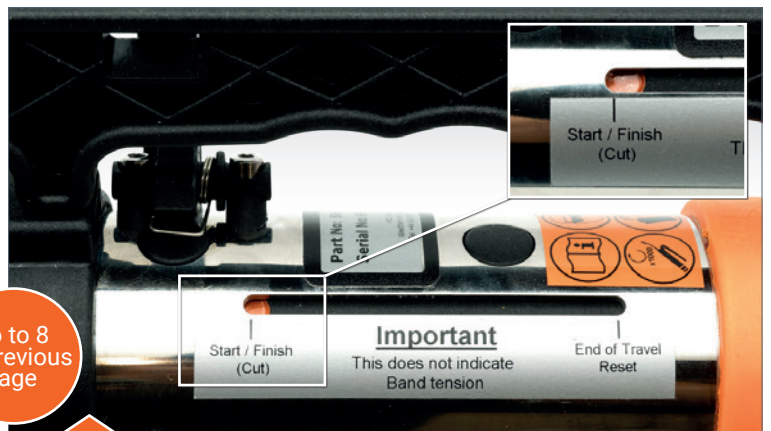

8.1

...wind Torque wrench anti-clockwise...



NOTE – In the anti-clockwise direction, the torque wrench will click over if enough resistance is met. This could be experienced if the tool is forced when reaching the end of its travel at the Start / Finish position.



Operation – Using the Tool with Norbar Torque Wrench

IMPORTANT – If Norbar type torque wrench is being utilised follow steps 10-20 and refer to the torque setting section.

10

Wrap band around the application...
...and insert band into other end of buckle



11

Pull band tight by hand, making sure teeth are fully engaged with band



12

Set Torque Wrench to the required Torque

Refer to the tensioning tables in the torque setting section for the maximum recommended torque. See torque wrench manual for detailed operating instructions. For reference the maximum torque settings for each material are labelled on the tool and torque wrench.



WARNING – Do not exceed the maximum torque settings recommended for the Smart® Band system being applied

13

Attach Torque wrench to the square drive at the rear of the tool.


Optional – Lock Torque wrench to square drive using a 4mm hexagon key



Operation – Using the Tool with Norbar Torque Wrench


14

Is the orange marker at the Start / Finish position?

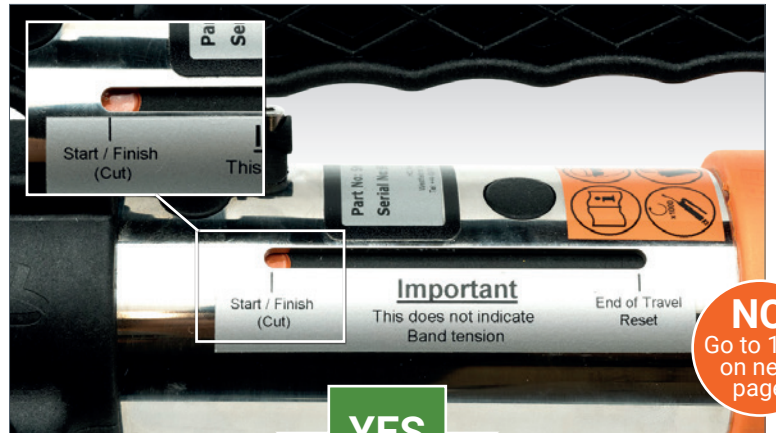

15

Insert tool onto band...
...and push tool up against buckle

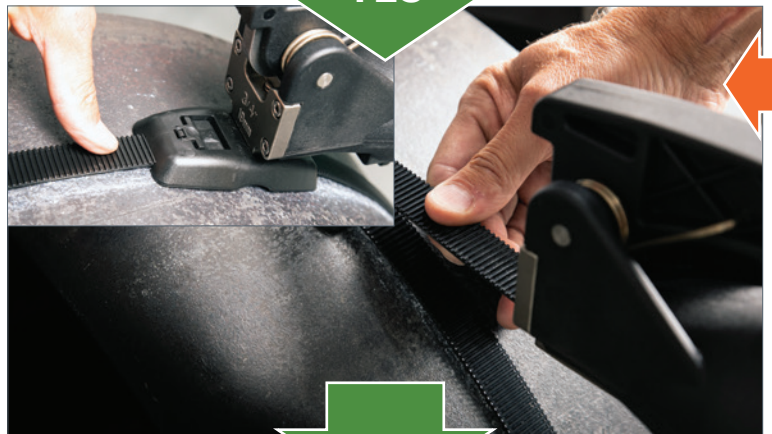

16

Tighten the band using a ratcheting movement...
...until the Torque wrench 'CLICKS'

WARNING – Do not wind the Torque wrench using a smooth continuous movement or beyond the click point



17

Is the orange marker at the 'End of Travel' position? (tool has run out of movement)



14.1


...wind Torque wrench anti-clockwise...



Go to 14
on previous
page

14.2


...until the orange marker is at the
Start / Finish position

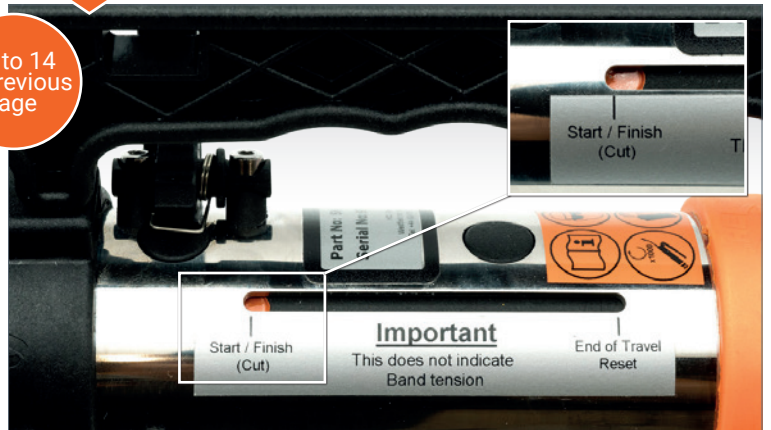

17.2

...until the orange marker is at the
Start / Finish position

Go to 16
on previous
page

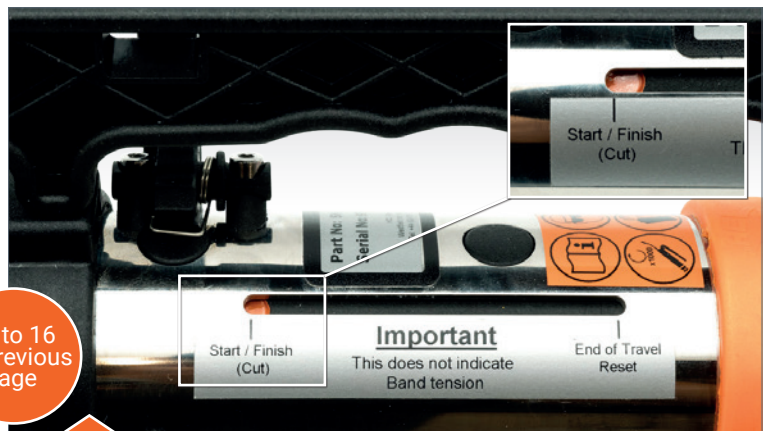

17.1


...wind Torque wrench anti-clockwise...



Operation - Using the Tool

18

Continue anti-clockwise rotation until the orange marker is at the 'Start / Finish' position.
At this point the cutting clasp will release the cutting handle.

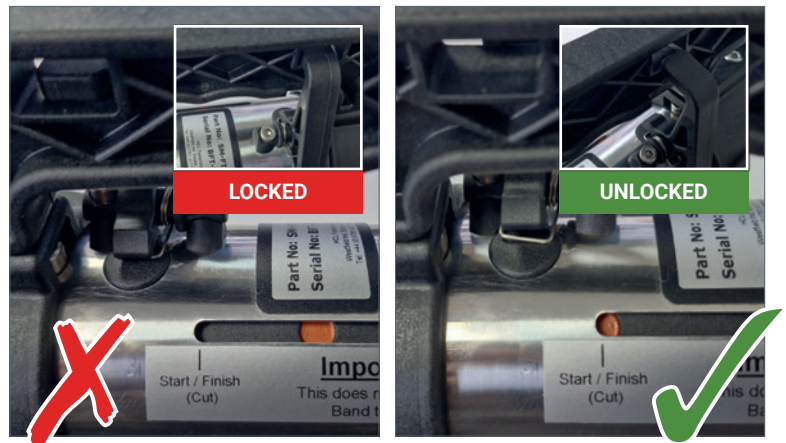

19

To remove the excess band, simply take hold of the cutting handle...
...and push upwards



20

Once cut, remove tool from buckle
Installation is now complete



Torque Setting – Smart® Band Hybrid & Compact

Note – This section is only required if the Norbar torque wrench is being utilised.

WARNING – The SM-FT-1001 tool range is not suitable for Smart® Band Standard systems. Do not exceed the maximum torque settings recommended for the Smart® Band system being applied



Recommended Torque Settings

Smart® Band Hybrid & Smart® Band Compact			Diameter	Max Input Torque ¹		Max System Force (During Tightening)			Min Retention Force (After Tightening)		
Size	Buckle Material	Band Material	mm	Nm	lb-ft	N	kgf	lbf	N	kgf	lbf
19mm (¾")	PA66 (Nylon 6.6.)	PA66 (Nylon 6.6.)	600	8	5.9	6000	612	1349	2500	255	562
	PA12GF (Nylon 12 Glass-filled)	PA12GF (Nylon 12 Glass-filled)		9	6.6	7000	714	1574	3500	357	787
	PPS	PPS		9	6.6	7000	714	1574	3500	357	787
	POM (Acetal)	POM (Acetal)		7.5	5.6	6000	612	1349	2500	255	562
32mm (1¼")	PA12GF (Nylon 12 Glass-filled)	PA12GF (Nylon 12 Glass-filled)	600	16	11.8	14000	1428	3147	7000	714	1574
	PPS	PPS		16	11.8	12000	1224	2698	7000	714	1574

¹ The input torque in the table above is the maximum recommended torque around a cylindrical application. This may need to be reduced depending on the following:

- An irregular shaped application, e.g. an application that has sharp corners around its profile
- An application in high ambient temperatures and direct sunlight, where the temperature of the Smart® Band exceeds 40°C
- An application where the Smart® Band buckle is suspended in mid-air, i.e the buckle is not supported underneath

Servicing

NOTE – It is advised that a full service is carried out after every 1000 straps or every year, whichever is soonest

1

Wind the square drive clockwise until orange marker is at the 'End of Travel' position

2

Tap square drive on rear of tool to ensure rear housing is as far forward as possible (this will aid the removal of the bolts)

3

Remove M8 Buttonhead screws (4x) using 5mm hexagon key

4

Remove internal sub-assembly

5

Wind the square drive anti-clockwise to remove threaded shaft from internal housing.


Thoroughly clean all parts.

Apply PTFE grease to male and female threads as shown

6


Remove M4 Capscrews and Full nuts (4x each) from split housing.

Thoroughly clean all parts

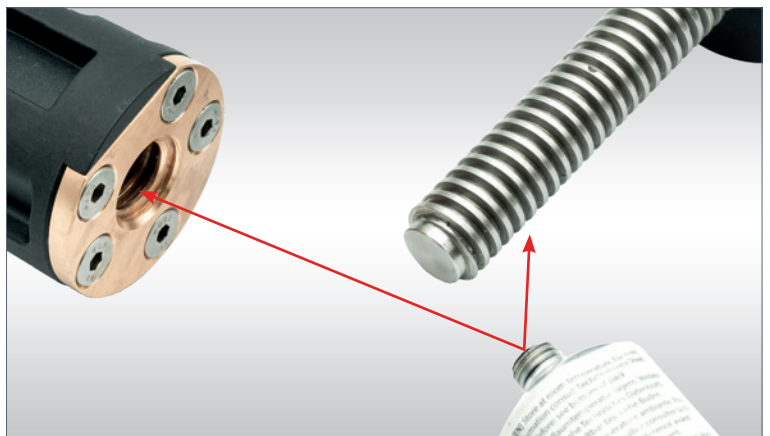

7

Apply PTFE grease to thrust washers and split housing as shown

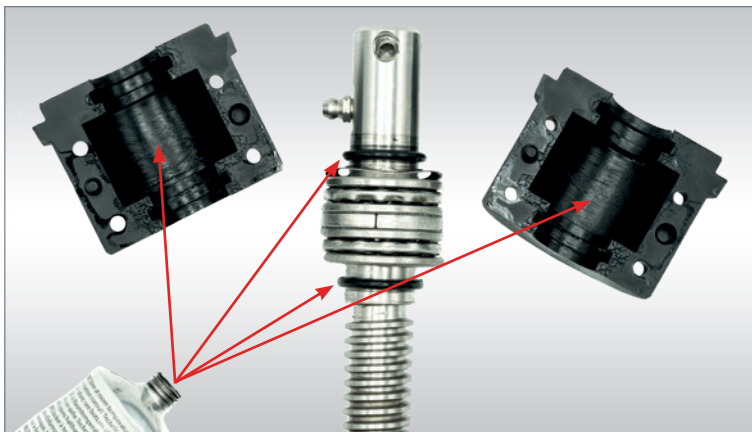


8

Change the Pawl and Blade by firstly removing the Pin from the Pawl housing



9

Remove the Pawl assembly and spring

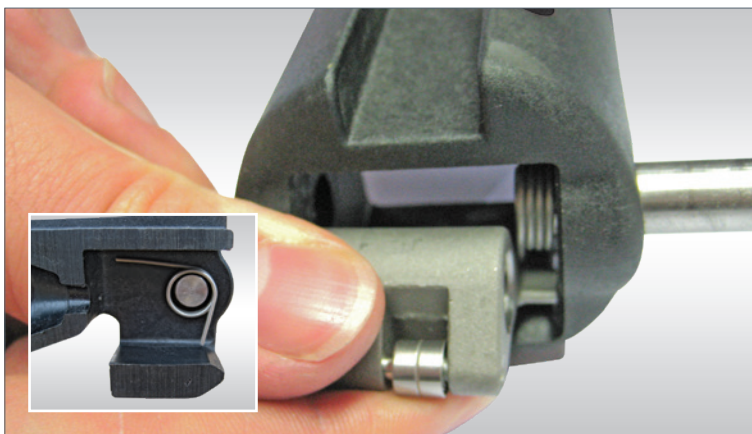

NOTE – Take care to note the orientation of the spring for reinsertion

10

Reassemble Pawl Housing as reverse of disassembly




11

To take off the cutting blade housing, remove M6 Capscrew and slide front assembly off main body. Thoroughly clean all parts



12


Ensure cutting handle is in the down position. Remove Capscrews (4x) using 3mm hexagon key and remove old front plate

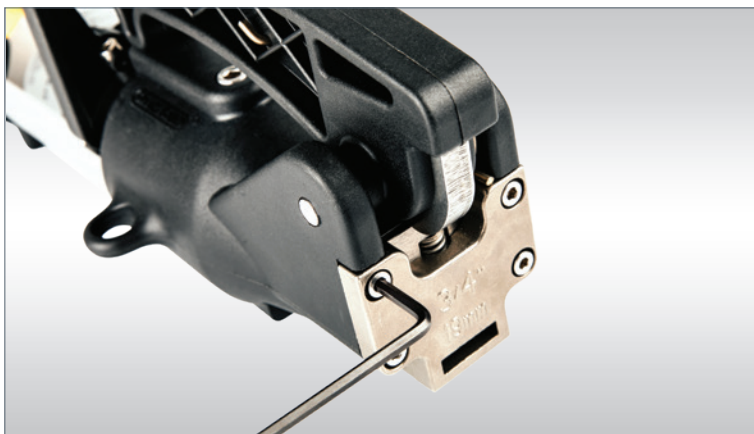

13

Remove existing blade and insert spring into new blade. Grease Cam and Blade with PTFE grease as shown

WARNING – Care must be taken when handling the sharp blade to avoid injury

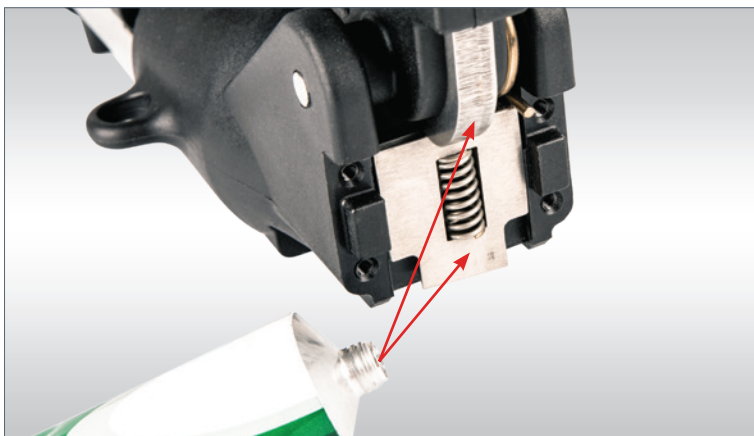

14

Reassemble tool as reverse of disassembly

15

If the tool has been used subsea it is advised that it is immediately washed thoroughly by immersing in clean fresh water. A full service is advised in this situation. However, if this is not possible the main thread can be lubricated with PTFE grease via the grease nipple located on the main shaft at the rear of the tool

NOTE – Never store the tool wet



Servicing – Troubleshooting

Symptom 1: Smart® Band failure during fitting

Failure Mode & Possible Cause	Solution
1. System breaks due to cutting whilst in tension (orange marker not in 'Start / Finish' position)	Do not operate cutter during tightening (Refer to Section 3.1, steps 18-20)
2. Band/Buckle breaks due to incorrect input torque	Set correct input torque (Refer to Section 3.2, Torque Setting Table)
3. Buckle breaks due to incorrect tool positioning during fitting	Ensure tool is correctly positioned in buckle. Do not lift tool away from application during tightening (Refer to Section 3.1, step 15)
4. Band breaks due to repeated relaxing and re-tightening	Only tighten the band once
5. Band pulls out of fixed end of buckle	Ensure that latch is fully engaged with band before tensioning (Refer to Section 3.1, step 2)
6. Buckle breaks due to being positioned in mid-air or around too small a radius	Position Buckle on suitable radius (Refer to Banding Products Technical Booklet). Reduce the input torque if re-positioning is not possible
7. Band breaks due to being positioned around too small a radius	Position Buckle on suitable radius (Refer to Banding Products Technical Booklet). Reduce the input torque if re-positioning is not possible

Symptom 2: Inadequate Smart® Band tension

Possible Cause	Solution
1. Tool has hit rear stop (orange marker in the 'End of Travel' position)	Wind square drive anti-clockwise until orange marker is in the 'Start / Finish' position. Then continue tightening the band until the Torque wrench 'CLICKS' (Refer to section 3.1 step 8)
2. Input torque incorrect	Set Torque Wrench to correct torque (Refer to Section 3.2, Torque Setting Table)
3. Tool requires servicing	Service fitting tool (Refer to Section 4.1)
4. Tool under performing (lack of tension) after subsea use	Clean & lubricate tool (Refer to Section 4.1)

Symptom 3: Tool does not grip Smart® Band

Possible Cause	Solution
1. Excess band tail too short	Remove band and replace with a longer length
2. Pawl housing not fully forward (orange marker not in 'Start / Finish' position)	Wind square drive anti-clockwise until orange marker is in the 'Start / Finish' position (Refer to Section 3.1, step 6)
3. Pawl teeth dirty or clogged	Rotate square drive anti-clockwise until orange marker is in the 'Start / Finish' position. From the underside of the tool inspect the pawl and clear debris as required
4. Incorrect pawl fitted	Remove pawl and replace with correct size for band (Refer to Section 4.1, Steps 1-10)
5. Pawl stuck in position	Remove internal sub-assembly from tool and un-stick pawl (Refer to Section 4.1, steps 1-4). Clean and re-grease pawl and ensure free movement

Symptom 4: Smart® Band does not feed through tool

Possible Cause	Solution
1. Blockage in tool, e.g. band	Remove internal sub-assembly or front sub-assembly as required, then clear blockage (Refer to Section 4.1, steps 1-4)
2. Pawl stuck in position	Remove internal sub-assembly from tool and un-stick pawl (Refer to Section 4.1, steps 1-4). Clean and re-grease pawl and ensure free movement
3. Pawl Housing not fully forward	Wind square drive anti-clockwise until orange marker is in the 'Start / Finish' position (Refer to Section 3.1, step 6)
4. Blade stuck down	Remove and clean blade. Front end may need to be removed. Be careful that blade does not spring out (Refer to Section 4.1, steps 11-14)
5. Incorrect front end is fitted	Remove front end and replace with correct one (Refer to Section 4.1, steps 11-14)


Symptom 5: Tool does not cut or it is too difficult to cut

Possible Cause	Solution
1. Blockage in tool, e.g. band	Remove blade and/or front end as required, then clear blockage (Refer to Section 4.1, steps 11-14)
2. Cam not lubricated (blade may also make 'screeching' noise)	Grease cam and blade (Refer to Section 4.1, step 13)
3. Blade worn or damaged	Replace or re-sharpen blade (Refer to Section 4.1, steps 11-14)
4. Incorrect blade or front end is fitted	Remove blade and/or front end and replace with correct size for band (Refer to Section 4.1, steps 11-14)

Servicing - Parts List

ITEM	PART NUMBER	DESCRIPTION	QTY.
1	ASM1015	HOUSING, MAIN BODY ASSEMBLY	1
2	PRT1004	GUIDE	1
3	NUT_NYLOC_HEX_M6_SS	NUT, NYLOC, HEXAGON, M6, SS	2
4	CPS_M6X10_SS	CAPSCREW, SKT HD, M6x10LG, SS	1
5	PRT1341	SPACER, PIVOT PIN	2
6	PRT1340	PIN, PIVOT	1
7	PRT1339	CLASP, CUT PREVENTION	1
8	PRT1342	SPRING, TORSION	1
9	CPS_M4X12_SS	CAPSCREW, SKT HD, M4x12LG, SS	2
10	PRT1597	MAIN SHAFT, THREADED TR20x4	1
11	THB_20_35_10_SS	BEARING, THRUST, BALL, 20IDx35ODx10LG	2
12	PRT1058	WASHER, FLAT, 12IDx35ODx4LG	2
13	WAS_WAVE_2670_3432_124	WASHER, WAVE SPRING, 26.70IDx34.32ODx1.24LG	1
14	PRT1045	HOUSING, THRUST BEARING	2
15	NUT_HEX_M4_SS	NUT, FULL, HEXAGON, M4, SS	4
16	CPS_M4X16_SS	CAPSCREW, SKT HD, M4x16LG, SS	4
17	ORG_01872X262_BS116_N70A	O-RING, BS116, 18.72IDx2.62CS, NITRILE 70A	2
18	SSS_M8X8_CUP_SS	SKT SETSCREW, M8x8LG, CUP POINT, SS	2
19	GN_M6_STRAIGHT_SS	GREASE NIPPLE, STRAIGHT, SS	1
20	ASM1193	PAWL HOUSING OVERMOULDED ASSEMBLY	1

21	PRT1036	PAWL, 32mm	1
	PRT1055	PAWL, 19mm	1
20	PRT1037	PIN, Ø10x54LG	1
23	PRT1038	PIN, Ø3x20LG	1
24	PRT1039	SPRING, TORSION	1
25	PRT1502	BEARING	1
26	PRT1584	FLANGED NUT TR20x4	1
27	CSK_M6X18_SS	COUNTERSUNK SCREW, SKT HD, M6x18LG, SS	5
28	PRT1046	HOUSING, CUTTING BLADE	1
29	PRT1295	FRONT END, CAST, 32mm, CHAMFERED SLOT	1
	PRT1296	FRONT END, CAST, 19mm CHAMFERED SLOT	1
30	CPS_M4X16_SS	CAPSCREW, SKT HD, M4x16LG, SS	4
31	PRT1048	BLADE, CUTTING, 32mm	1
	PRT1057	BLADE, CUTTING, 19mm	1
32	PRT1049	SPRING, COMPRESSION	1
33	ASM1023	CUTTING LEVER ASSEMBLY	1
34	PRT1052	PIN, Ø8x55LG	1
35	PRT1503	HANDLE RETURN SPRING	1
36	BHS_M8X10_SS	BUTTONHEAD SCREW, SKT HD, M8x10LG, SS	4
37	CPS_M6X16_SS	CAPSCREW, SKT HD, M6x16LG, SS	1

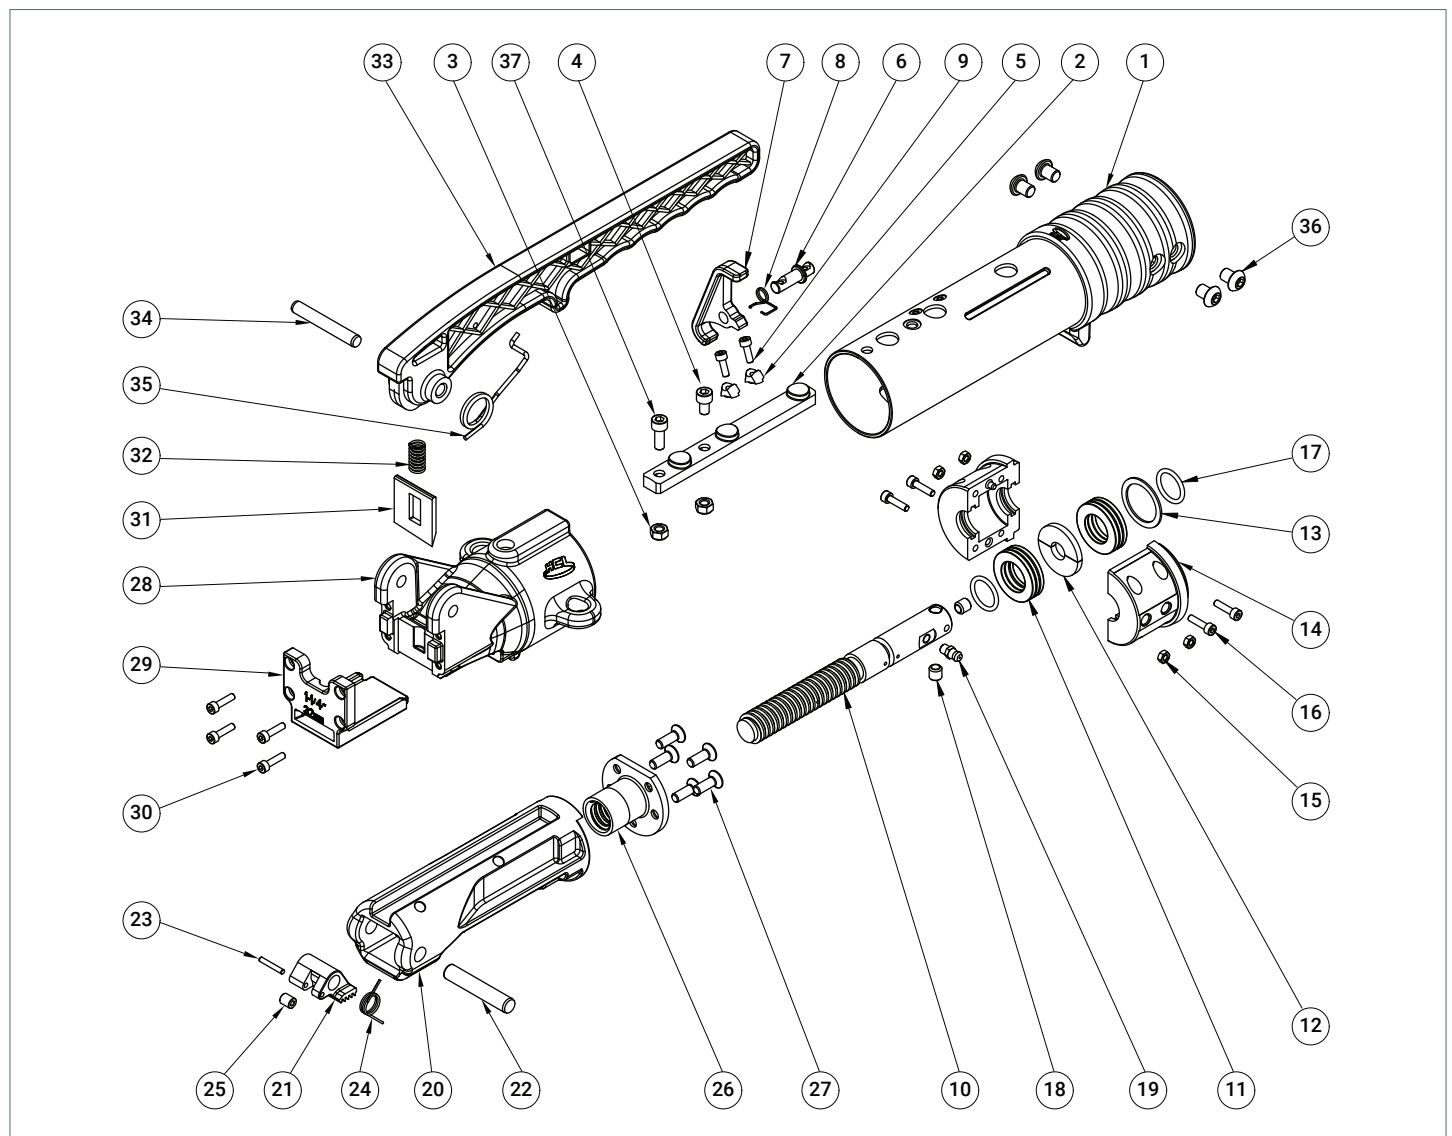



iq
parts
IQ-PARTS-SHOP.COM

info@iq-parts.nl
Harsweg 34A
2461 EZ Ter Aar
T +31 252 624 126
The Netherlands